3 Disassembly and Reassembly

This section of the service manual describes the disassembly and reassembly procedures for the GY15VS*/GY17VS* TFT-LCD monitors.

WARNING: This monitor contains electrostatically sensitive devices. Use caution when handling these components.

3-1 Disassembly

Cautions: 1. Disconnect the monitor from the power source before disassembly.
2. Follow these directions carefully; never use metal instruments to pry apart the cabinet.
3. R/Cover opening jig : BH81-00001A

3-1 GY15VS*

1. Locate the monitor on the cushion table face down.

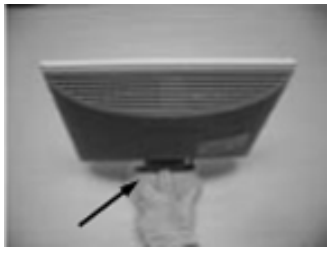

2. Loosen the snaps on stand door through the slot on rear cover. Remove 4 screws.

3. Remove 2 cable screws.

4. Remove 2 screws on the rear cover.

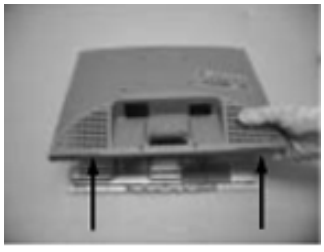

5. Open the rear cover by using an opening jig.

CONFIDENTIAL

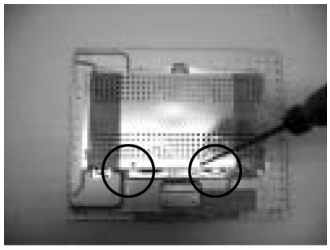

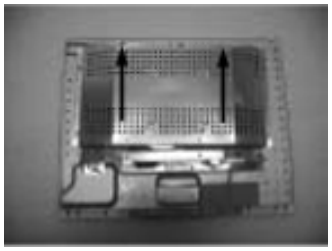

6. Remove 2 screws of PCB shield.

7. Disconnect the panel(inverter) cable from IP-board.

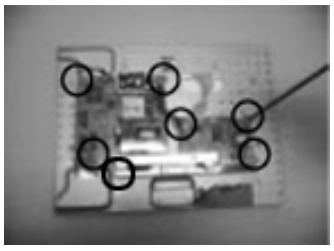

8. Remove 7 screws of IP-board.

9. Separate front assy and panel assy.

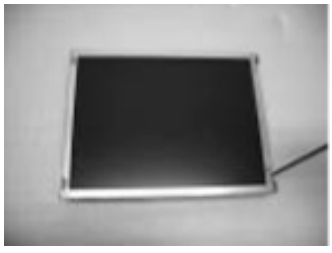

10 Remove 4 screws on LCD-panel.

CONFIDENTIAL

3-2 GY17VS*

1. Loacte the monitor on the table face down.

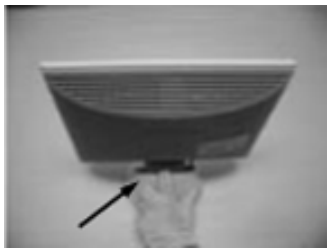

2. Loosen the snaps on stand door through the slot on rear cover. Remove 4 screws.

3. Remove 2 cable screws.

4. Remove 2 screws on the rear cover.

5. Open the rear cover by using an opening jig.

6. Remove 4 screws on PCB shield.

CONFIDENTIAL

7. Disconnect the cable from socket and remove function-PCB.

8. Separate front assy and panel assy.

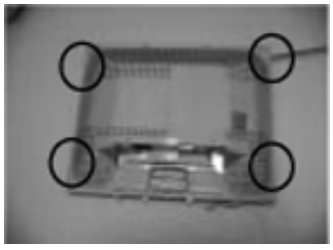

9. Remove 4 screws on LCD-panel.